



# SLIM VAC

| Cordless  
Handheld Vacuum

Model EV1106HH

# USER GUIDE



Thank you for choosing Dirt Devil!

**PLEASE READ BEFORE RETURNING THIS PRODUCT FOR ANY REASON.**






# IMPORTANT SAFETY NOTIFICATIONS

Before operating the Vacuum cleaner,  
please read all safety and operating instructions.  
Save all instructions in a safe place for future reference.

---




## DEFINITIONS: Safety Alert Symbols and Words



This instruction manual uses the following safety alert symbols and words to alert you to hazardous situations and your risk of personal injury or property damage.


-  **DANGER:** Indicates an imminently hazardous situation which, if not avoided, **could** result in death or serious injury.
-  **WARNING:** Users of this product are cautioned not to make modifications or changes that are not approved by ePro USA, LLC, doing so may void the compliance of this product.
-  **CAUTION:** Indicates a potentially hazardous situation which, if not avoided, **may** result in minor or moderate injury.
-  **ATTENTION:** Alerts the user to the presence of important operating and maintenance instructions for this appliance.
-  (Used without word) Indicates a safety related message.

**NOTICE:** Indicates a practice **not related to personal injury** which, if not avoided, **may** result in property damage.

---

-  **WARNING: Read all safety warnings and all instructions.**  
Failure to follow the warnings and instructions may result in electric shock, fire and/ or serious injury.
  -  **WARNING:** Never modify the product or any part of it. Damage or personal injury could result.
  -  **WARNING:** To reduce the risk of injury, read the instruction manual.
- 

-  **WARNING:** Do not alter the plug in any way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet.
-  **WARNING:** Before assembling or disassembling the accessories always ensure that the appliance has been unplugged from the wall outlet! Make sure that the appliance is switched off and unplugged.

 **WARNING:** This product can expose you to chemicals including Lead, which is known to the State of California to cause reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

# IMPORTANT SAFETY NOTIFICATIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

**⚠ WARNING:** To reduce the risk of fire, electrical shock or injury:

- Shock Hazard. Do not put the vacuum in water or other liquid.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not recharge with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center or dispose of it according to your local waste and disposal guidelines.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not pick up toxic material (i.e. chlorine bleach, ammonia, drain cleaner, etc.)
- Do not vacuum toner (for laser printer, copy machines etc.) as there is a risk of fire and explosion.
- Do not vacuum plaster, cement etc. as the filter can become blocked.
- Do not use the vacuum without all the filters fitted.
- Do not operate outdoors. This appliance is intended for house hold use only and not for commercial or industrial use.
- Do not operate on wet floor or moist conditions (i.e. bathroom). Water and moisture could damage the circuit board.
- Do not handle recharging adapter plug with wet hands.
- Use extra caution when cleaning on stairs.
- Plug the recharging adapter plug directly into an electrical outlet.
- Use the recharging adapter plug only in a standard electrical outlet (120V/60Hz).
- Unplug the recharging adapter plug from outlet before any routine cleaning or maintenance.
- Do not look into the air vents when the unit is switched on, as sometimes small debris can be discharged, especially after cleaning or replacing the filter.
- Do not leave appliance unattended when plugged in for recharging.
- Do not allow appliance to be used as a toy. Close attention is necessary when used by or near children.

# ADDITIONAL SAFETY WARNINGS

## WARNING:

- **Prevent unintentional starting.** Ensure the switch is in the off-position before picking up or carrying the appliance.
- **Have servicing performed by a qualified repair person using only identical replacement parts.**  
This will ensure that the safety of the product is maintained.
- **Do not modify or attempt to repair the appliance except as indicated in the instructions for use and care.**
- **Do not store or use the appliance near high temperature areas.**
- **To prevent tripping accidents, store vacuum after each use.**
- **Do not expose the vacuum to outdoor elements.**
- **Do not use any recharging adapter cable and plug. Only use the recharging plug included with this product. Other rechargers may not be compatible.**

**CHARGER:** USB Connection: 5V === 2A  
Charging Current: 2.2A MAX

**Battery Pack:** 7.4V 2900mAh 21.46Wh

**Power Consumption:** 75W

- **Do not place any object on top of the product or place the product on a soft surface that might block the ventilation slots and result in excessive internal heat.** Place the product in a position away from any heat source. The charging circuit is ventilated through slots in the left and the right of the housing.
- **Do not operate the product with a damaged cord or recharger plug adapter.**
- **Do not operate the product if it has received a sharp blow, been dropped or otherwise damaged in any way.**
- **Do not disassemble the product; take it to an authorized service center when service or repair is required.** Incorrect reassembly may result in a risk of electric shock, electrocution or fire.
- **Disconnect the recharging adapter plug from the outlet before attempting any cleaning. This will reduce the risk of electric shock.**
- **If the vacuum requires cleaning, unplug the plug, switch off the unit.**  
Do not use cleaners or solvents to clean the exterior of the vacuum. Use only a damp or dry cloth.
- **For safety reasons, this vacuum is designed to power off if the motor overheats.** If this occurs, please switch the power off and unplug the unit to allow the motor to cool down before using again.

# GOOD TO KNOW

## HELPFUL HINTS

- **DO** empty the dust bin and clean the filters regularly for optimal operation of the vacuum.
- **DO** keep hair, loose clothing, fingers, feet and body parts away from openings or moving parts.
- **DO** disconnect the appliance from the mains supply before storing.
- **DO** turn off controls before you connect or disconnect the appliance to or from the recharger power supply.
- **DO** disconnect the appliance from the recharger power supply when not in use, before changing the filters, cleaning the filters or connecting/disconnecting the accessories.
- **DO** use only on dry, indoor surfaces.
- **DO** use only as described in this manual. Use only manufacturer's recommended attachments.
- **DO** keep recharging cord away from heated surfaces.
- **DO** keep all openings free of dust, lint, hair, and anything that may reduce airflow.
- **DO** use extra care when vacuuming on stairs.
- **DO** keep your work area well lit.
- **DO** ensure children and babies cannot play with plastic bags or any packaging materials.
- **DO** recharge the appliance from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
- If this appliance is used by a third party, **DO** supply the instruction manual with it. No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling of appliance. This product has not been designed for any uses other than those specified in this manual.
- **DO NOT** modify the polarized plug on the recharger adapter to fit a non-polarized outlet or extension cord.
- **DO** keep appliance on a level surface.
- **ONLY** for domestic use. Industrial or commercial use invalidates the warranty.

### DO NOT RETURN TO STORE

Contact ePro Support for assistance with your vacuum.

SCAN TO VISIT  
SUPPORT PAGE



For assistance with your product,  
please email [service@eproselect.com](mailto:service@eproselect.com)  
or visit our support page:  
<https://www.eproselect.com/dirtdevil-support>





**GIVE US A CALL!**  
**1-877-858-EPRO (3776)**

The Dirt Devil logo and DIRT DEVIL are registered trademarks of Techtronic Cordless GP and used under license.

# GETTING TO KNOW YOUR CORDLESS VACUUM


## LOCATION OF CONTROLS

  - 1 Suction Nozzle
- 2 Dust Bin
- 3 Dust Bin Release Button
- 4 Power Switch
- 5 Charging Port (back of unit)
- 6 Pet Hair Lint Tool
- 7 2-in-1 Brush/Crevise Tool
- 8 USB-C Charging Cable
- 9 HEPA Filter
- 10 Home Docking Stand

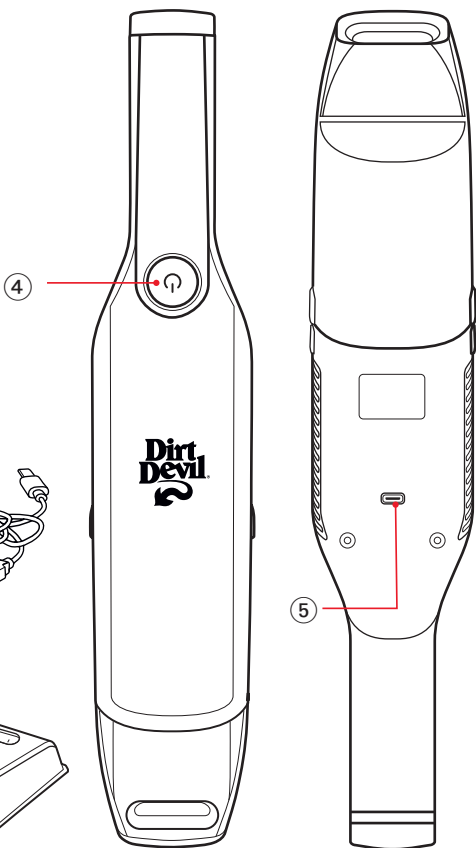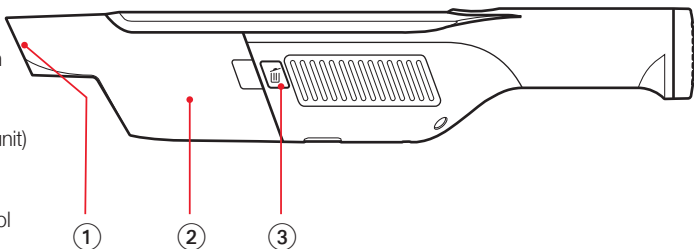

## IN THE BOX

Cordless vacuum, extension crevice tool, brush tool, USB-C charging cable, home docking stand.

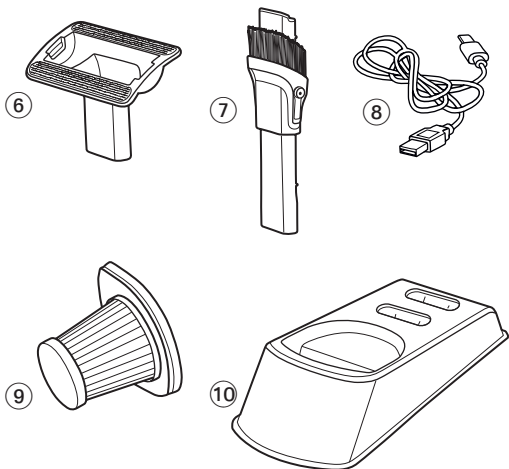

Back of Unit




**CAUTION:** Do not plug in your vacuum cleaner until you are familiar with all instructions and operating procedures.

# OPERATING INSTRUCTIONS

## INITIAL SETUP


- 1 For first use, unit must be fully charged.  
Before plugging in for charging, make sure the power switch is in the OFF position.
- 2 Connect the USB-C cable end (A) to the charging port (B) on the backside of the unit.

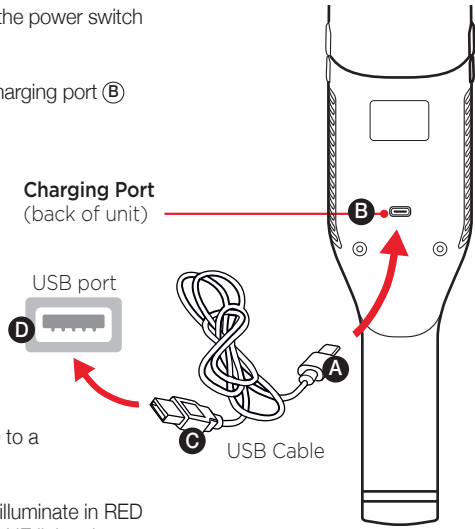


- 3 Connect the other end of the USB cable (C) to a powered USB outlet (D).
- 4 The CHARGING INDICATOR LIGHT (E) will illuminate in RED color while recharging and will change to BLUE light when fully charged and during operation in about 3-3.5 hours.

**⚠ ALLOW BATTERY UP TO 3.5 HOURS TO FULLY RECHARGE.**

**NOTE:** Multi-colored LED light within power button icon will illuminate in BLUE when fully charged/ and during operation. The button will flash RED light when charging or low battery.

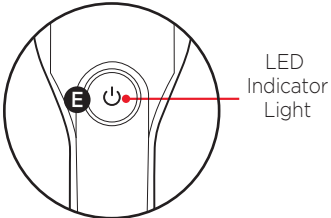

**NOTE:** The hand vacuum can be charged with any USB port that provides 2A power (USB charging cable included).

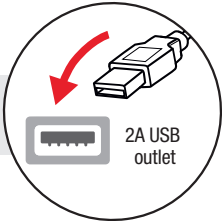

# OPERATING INSTRUCTIONS

## POWERING THE HAND VACUUM ON/OFF

- 1 When fully charged, disconnect the USB cable from unit and external USB port
- 2 **HIGH MODE** - Press the POWER button once for extra suction power and an operating run time of **15 minutes**.
- 3 **LOW MODE** - Press the POWER button twice for an operating run time of **30 minutes**.
- 4 Press the power button again after LOW MODE to turn the vacuum OFF.

**TIP:** To retain the full capacity of the rechargeable battery, fully charge hand vacuum every 2-3 months even when it is not being regularly used.

**Power Button**  
(built-in LED lights)

**BLUE LIGHT:** Multi-colored LED light within power button icon will illuminate in BLUE when fully charged and during operation.

**RED LIGHT:** Button will flash RED light while unit is charging or when battery is low.






# OPERATING INSTRUCTIONS *(continued)*

## ACCESSORY ATTACHMENTS

- 1 Use the provided **2-in-1 BRUSH/CREVICE** tool for narrow suction dirt and debris between cushions, in corners, and along wall and counter-top edges. Can be used on blinds, lamp shades, vents and other narrow areas.
- 2 Use the **LINT BRUSH** attachment on fabrics, curtains, cushions and more delicate surfaces. Avoid adding pressure to allow the lint brush to help with the suction on textiles.

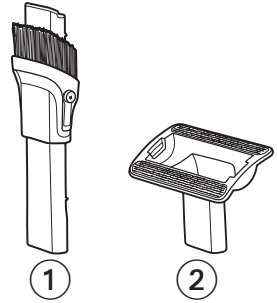

## CLEANING AND MAINTENANCE


### EMPTYING AND CLEANING

To achieve the best performance, empty the dust bin and clean the dust bin filter after every use. Always switch off and unplug the appliance from the ac power outlet before any maintenance or cleaning.

- Clean the outside of the appliance and inside the dust bin with a damp cloth. Dry thoroughly before use.
- Never immerse the appliance in the water.

**If suction power seems to diminish, it may be time to empty the dust bin or clean or replace the HEPA filter.**

- 1 **TO REMOVE THE DUST BIN** press **both** dust bin release buttons on both sides of unit.
- 2 Pull off the dust bin forward away from unit.
- 3 Remove Hepa filter
- 4 Empty the debris from the dust bin into trash can.
- 5 Clean the unattached dust bin filter and dust bin under running water. Dry thoroughly. Do not use abrasive or chemical cleaning agents.
- 6 Replace the dust bin filter back into the dust bin.  
**NEVER OPERATE THE APPLIANCE WITHOUT DUST BIN FILTER IN PLACE.**
- 6 Reattach the dust bin to the main body when you hear a click.

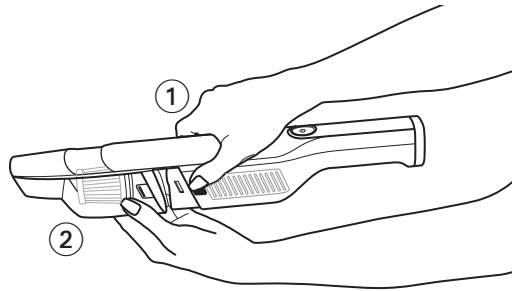

**CAUTION:** Before assembling or disassembling unit and accessories, always ensure that the appliance has been unplugged from the wall outlet! Make sure that the appliance is switched off and unplugged.

# TROUBLESHOOTING

OBSERVATION	POSSIBLE CAUSE	SOLUTION
Vacuum does not work	<ul style="list-style-type: none"> <li>Battery is not charged</li> <li>Check if the appliance is switched on</li> </ul>	<ul style="list-style-type: none"> <li>Recharge battery</li> <li>Ensure unit power button is switched on</li> </ul>
Suction power becomes weak	<ul style="list-style-type: none"> <li>Check if the appliance is clogged or damaged</li> <li>Check if the dust bin is full</li> <li>Check if the dust bin filter needs cleaning</li> </ul>	<ul style="list-style-type: none"> <li>Immediately remove the obstruction</li> <li>Turn unit off and unplug the appliance from the wall outlet and empty the dust bin</li> <li>Clean the dust bin filter</li> </ul>
Vacuum cleaner is overheating	Check that the appliance is not blocked	<ul style="list-style-type: none"> <li>Turn unit off and unplug the appliance from the wall outlet. Remove dust bin filter and check for objects in the air intake opening and remove obstruction</li> </ul>
Dust is coming out of the vacuum cleaner	<ul style="list-style-type: none"> <li>Check if the dust bin is full</li> <li>Check that the dust bin is properly fitted to the main body</li> <li>Check if the dust bin filter is in the dust bin</li> </ul>	<ul style="list-style-type: none"> <li>Empty and clean dust bin</li> <li>Refit the dust bin to the main body</li> <li>Install the filter in the dust bin</li> </ul>

**PRODUCT DIMENSIONS (WDH):** Hand vacuum only: 2.9" x 2.9" x 15"

### Technical Specifications

Power Consumption: **75W MAX**  
 Vacuum Capacity: **350ml**  
 Sound level: **80dBA**  
 Rechargeable Battery: **7.4 V/2900mAh Lithium-ion battery**  
 Runtime: **30min. (Eco) /15 min. (Turbo)**  
 Charging time: **3-4 Hours**  
 Charging current: **2.2A MAX**  
 USB Connection: **5V === 2A**  
 Motor Rated voltage: **DC 7.2 V**

*\*Run Times are estimates and can vary by accessory tool in use, filter cleanliness, and other factors.*

### BATTERY REMOVAL & DISPOSAL

This cordless rechargeable hand vacuum includes a Lithium-Ion battery. You can not dispose of this product with household waste. It must be disposed of safely at a hazardous waste collection site, recycling facility or an electronic retailer that recycles. Check your local or state laws for proper disposal procedures.

**For additional help contact ePro Support for assistance with your vacuum.**

**SCAN TO VISIT SUPPORT PAGE**



For assistance with your product, please email [service@proselect.com](mailto:service@proselect.com) or visit our support page: [proselect.com/dirtdevil-support](http://proselect.com/dirtdevil-support)



**GIVE US A CALL!**  
**1-877-858-3776**

The Dirt Devil logo and DIRT DEVIL are registered trademarks of Techtronic Cordless GP and used under license.

# TERMS AND CONDITIONS

## 1-YEAR LIMITED END USER WARRANTY

ePro USA LLC., (the "Company") warrants that their products (the "Product") are free of defects in material and workmanship for a period of 1-YEAR (the "Warranty Period") from the date of purchase by end user. In the event that the Product qualifies for coverage under this warranty, the Company at its option and at no charge may either repair or replace the Product (not including, shipping, handling, delivery or installation) with an identical product or product having similar features and functionality as determined by the Company. The Company does not warranty the installation, maintenance, or service of its Product. The Company is not responsible for ancillary equipment not supplied by the Company, which is attached to or used in connection with the Company's Product, or for the operation of the Product with any ancillary equipment, and all such equipment and operation of such equipment with the Product, is expressly excluded from this limited warranty. Furthermore, the Company shall not be responsible for any damage to the Product resulting from the use or operation of the ancillary equipment not furnished by the Company for use with the Product.

The Company extends this limited warranty only to the original end-user. This limited warranty and the remedies hereunder are limited to Products properly used, maintained, stored, installed and used for their intended purpose and use only, in accordance with the Company instructions. This warranty shall not apply to Product installed, operated or maintained in or under abnormal conditions. This warranty is not applicable to any Product, which is not operated and/or installed in accordance with the Company's specifications and or industry practices and standards. This warranty does not extend to any battery power supply included in/with the Product.

This warranty also does not extend to the purchase of opened, used, repaired, repackaged and/or resealed products, including but not limited to sale of such products on Internet auctions sites and/or sales of such products by surplus, bulk resellers, or any individual unauthorized resellers.

Any and all warranties or guarantees shall immediately cease and terminate as to any products or parts thereof which are repaired, replaced, altered, or modified, without the prior express and written permission of the Company.

This warranty sets forth all of the Company's responsibilities for the Product.

**THIS WARRANTY IS GIVEN IN LIEU OF ALL OTHER EXPRESS WARRANTIES. IMPLIED WARRANTIES, STATUTORY OR OTHERWISE, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT, INCLUDING WITHOUT LIMITATION, IN CONTRACT, TORT, STRICT LIABILITY OR WARRANTY, SHALL THE COMPANY BE LIABLE TO THE PURCHASER OR TO ANY THIRD PARTY, FOR ANY DAMAGES OR FOR ANY LOSS OF USE, LOSS OF TIME, LOSS OF LIFE, INCONVENIENCE, COMMERCIAL LOSS, LOST PROFITS OR SAVINGS OR INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE SUCH PRODUCT. TO THE FULL EXTENT THAT SUCH MAY BE DISCLAIMED BY LAW, COMPANY'S SOLE LIABILITY SHALL BE TO REPLACE OR REPAIR THE PRODUCT.**

**⚠ WARNING:** This product can expose you to chemicals including Lead, which is known to the State of California to cause reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

If you have any questions or for further support, please email us at [service@eproselect.com](mailto:service@eproselect.com)



**SCAN TO VISIT  
SUPPORT PAGE**



**For More Information**

For assistance with your product, please email  
**service@eproselect.com**, call **1-877-858-EPRO (3776)**  
or visit **<https://www.eproselect.com/dirtdevil-support>**

PLEASE RECYCLE Facilities may not exist in your area.



**MADE IN CHINA**

Distributed by ePro USA LLC. Austin, TX ©2024 ePro USA LLC. All rights reserved.

The Dirt Devil logo and DIRT DEVIL are registered trademarks  
of Techtronic Cordless GP and used under license.